




**CONNECT A C.D. PLAYER
TO YOUR HI-FI SYSTEM**

Compact Disc Switching Unit


INDEPENDENT EARTH WIRING

QED

A C.D. Player needs a special input to work properly, but many otherwise very good amplifiers do not have such a dedicated C.D. input. This need not be a problem with the MA28, because not only does it switch between TUNER and C.D. it also adjusts the C.D. player's output level for optimum performance.

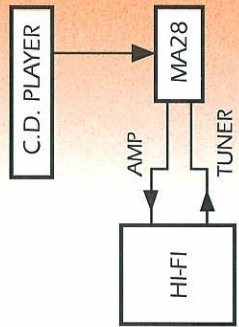

TYPE NO.
MA 28
QED
MADE IN
ENGLAND

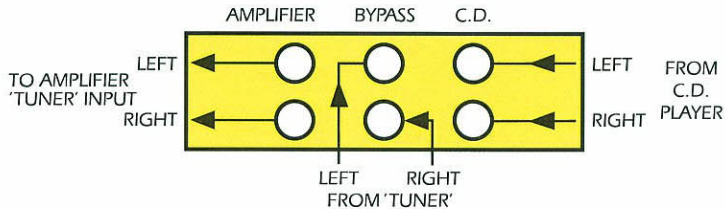

CONNECTION

To connect the MA28, it is first necessary to disconnect the TUNER from the AMPLIFIER and route it through the MA28 as shown. An additional cable will be required to connect the MA28 to the AMPLIFIER. The C.D. Player is connected directly to the MA28.

OPERATION

Press the button to select the C.D. input, or release the button to revert to the TUNER input.