

Why not expand the use of your Hi-Fi System by adding a second tape recorder, be it Compact Cassette, reel to reel, D.A.T. or Digital Compact Cassette. It is so much easier using the MA 29 and the benefits are considerable, the instantaneous selection of any recording, playback or tape to tape function.





**CONNECT TWO TAPE DECKS  
TO YOUR HI-FI SYSTEM**

## 2 way Tape Switching Unit

INDEPENDENT EARTH WIRING

**QED**

TYPE NO.  
**MA 29**  
**QED**  
MADE IN  
ENGLAND

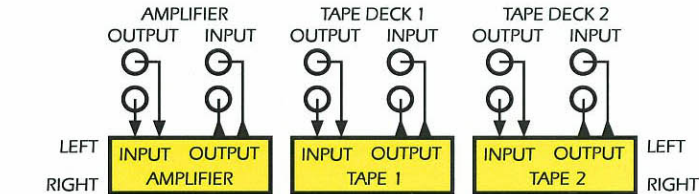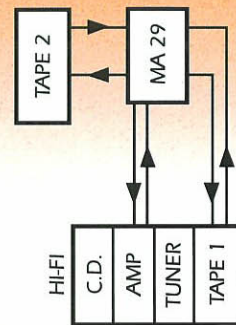

### CONNECTION

To connect the MA 29, it is first necessary to disconnect TAPE DECK ONE from the AMPLIFIER and route it through the MA 29 as shown. Two additional pairs of cables will be required to connect the MA 29 to the AMPLIFIER. Both TAPE DECK ONE and TAPE DECK TWO connect directly to the MA 29.

### OPERATION

When using either TAPE DECK ONE or TAPE DECK TWO for recording or playback via the AMPLIFIER, just select the appropriate button marked T1 or T2. When recording from TAPE DECK ONE to TAPE DECK TWO or vice versa, simply select the button marked T1>T2 or T2>T1.

The signal is also automatically routed back to the amplifier for monitoring (listening to the signal that is being recorded) purposes.