

Adding a Second Tape Deck with the 2 WAY TAPE SWITCHING UNIT

Phono Socket Version

Why not expand the use of your HiFi System by adding a second tape recorder? It is so much easier using a Tape Switching Unit and the benefits are considerable, the instantaneous selection of any recording, playback or tape to tape function.

TECHNICAL INFORMATION


Termination is via 12 professional quality R.C.A. phono sockets. The rocker switches used are fitted with silver plated contacts. Full operating and connecting information is provided underneath the unit.

WIRING INSTRUCTIONS UNDERNEATH UNIT

ORDER CODE: TSU2P



WIRING INSTRUCTIONS

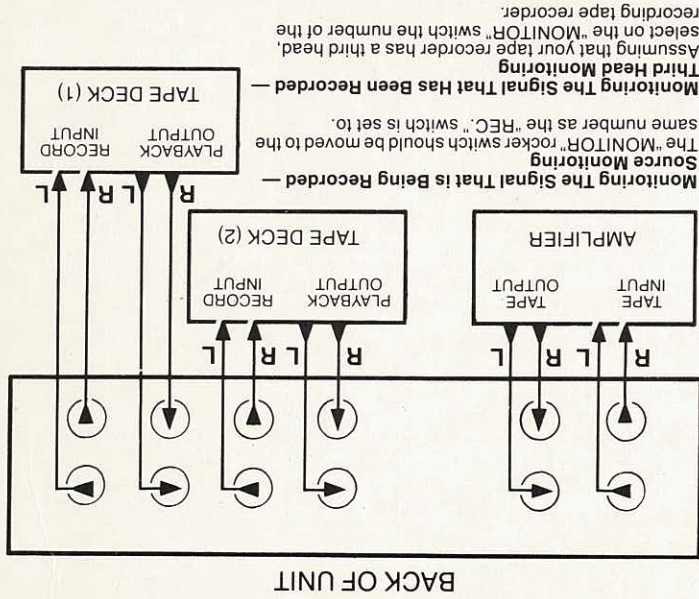

Monitoring The Signal That is Being Recorded — The "MONITOR" rocker switch should be moved to the same number as the "REC." switch is set to.

Source Monitoring — Assuming that your tape recorder has a third head, select on the "MONITOR" switch the number of the recording tape recorder.

CONNECTION
A total of six pairs of phono to phono leads will be required. The connection details for which, are printed on the back panel of the unit.

OPERATION
Play Back From Either Tape Recorder
To obtain playback through the amplifier, select either position "1" (tape deck one) or position "2" (tape deck two) on the rocker switch marked "MONITOR". The other switches should remain in the "off" position.

Recording Onto Tape Recorder One From The Amplifier
Move the switch marked "REC. Tape 1" to position "AMP".

Recording Onto Tape Recorder Two From The Amplifier
Move the switch marked "REC. Tape 2" to position "AMP".

Recording From Tape Recorder Two To Tape Recorder One
Select position "2" on "REC. Tape 1" switch.

Recording From Tape Recorder One To Tape Recorder Two
Select position "1" on "REC. Tape 2" switch.

Recording Onto Both Tape Recorders
Select "AMP" on "REC. Tape 1" and "REC. Tape 2" switches.

